

Modulating rotary actuator for 2 and 3-way control ball valves

- Torque 2 Nm
- Nominal voltage AC/DC 24 V
- Control: Modulating DC 0 ... 10 V
- Position feedback: DC 2 ... 10 V
- Running time 15 s



Technical data		
Electrical data	Nominal voltage	AC 24 V, 50/60 Hz DC 24 V
	Power supply range	AC/DC 19.2 28.8 V
	Power consumption In operation	1.5 W at nominal torque
	At rest	0.4 W
	For wire sizing	3 VA
	Connection	Cable 1 m, 4 x 0.75 mm <sup>2</sup>
	Parallel connection	Possible, note performance data
Functional data	Torque (nominal torque)	Min. 2 Nm at nominal voltage
	Control Control Signal Y Operating range	DC 0 10 V, typical input impedance 100k $\Omega$ DC 2 10 V
	Position feedback	DC 2 10 V, max. 1 mA (Measuring voltage U)
	Position accuracy	±5%
	Manual override	Gearing latch disengaged with pushbutton (temporary-permanent)
	Running time	15 s / 90°⊲
	Noise level	Max. 45 dB (A) (without the valve)
	Position indication	Mechanical, add-on
Safety	Protection class	III Extra low voltage
	Degree of protection	IP54 in any mounting position
	EMC	CE according to 89/336/EWG
	Mode of operation	Type 1 (to EN 60730-1)
	Rated impulse voltage	0.8 kV (to EN 60730-1)
	Control pollution degree	3 (to EN 60730-1)
	Ambient temperature range	0 +50°C
	Media temperature	+5 +110°C in control ball valve (-10°C with stem heating upon request)
	Non-operating temperature	−40 +80°C
	Ambient humidity range	95% r.H., non-condensating (to EN 60730-1)
	Maintenance	Maintenance-free
Dimensions / Weight	Dimensions	See «Dimensions» on page 2
	Weight	Approx. 550 g

# Safety notes



- The rotary actuator has been designed for use in stationary heating, ventilation and air conditioning systems and is not allowed to be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- It may only be installed by suitably trained personnel.

  All applicable legal or institutional installation regulations must be complied with.
- The switch for changing the direction of rotation may only be operated by authorized personnel. The direction of rotation must not be reversed in a frost protection circuit.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · The cable must not be removed from the device.
- The device contains electrical and electronic components and is not allowed to be disposed
  of as household refuse. All locally valid regulations and requirements must be observed.



# **Product features**

Mode of operation The actuator is controlled by means of a standard control signal DC 0 ... 10 V. It opens to the

position dictated by this signal. The measuring voltage U allows the damper position (0 ... 100%) to be electrically indicated and serves as a follow-up control signal for other actuators.

Straightforward direct mounting on the ball valve with only one screw. The assembly tool is Simple direct mounting

integrated in the plug-on position indicator. The mounting position in relation to the ball valve can

Adjustable angle of rotation Adjustable angle of rotation with mechanical end stops.

High functional reliability The actuator is overload-proof, requires no limit switches and automatically stops when the

end stop is reached.

Position feedback U5 Operation of the ball valve is optimised by a limiting ring. This ring reduces the angle of rotation

from 95° to 90°, i.e. U5 will deviate from Y by approximately 0.3 V when the valve is closed.

### **Accessories**

**Notes** 

Description Data sheet **Electrical accessories** Auxiliary switch S..A.. T2 - S..A.. Feedback potentiometer P..A.. T2 - P..A..

# **Electrical installation**

Note performance data.

· Connect via safety isolation transformer.

Direction of rotation switch is covered.

Factory setting: Direction of rotation Y2

Parallel connection of other actuators possible.

### Wiring diagram







Standard connection



Override control (frost protection circuit)

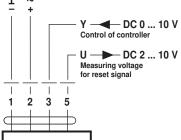

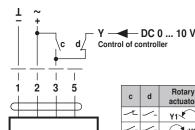


Direction of rotation



# **Dimensions [mm]**

# **Dimensional diagrams**

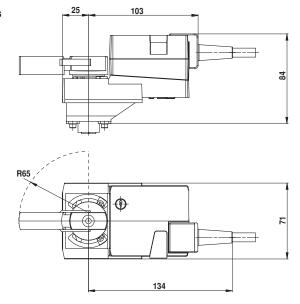

## **Further documentations**

- · Complete overview of actuators for water solutions
- · Data sheets for ball valves
- · Installation instructions for actuators and/or ball valves
- · Notes for project planning (hydraulic characteristic curves and circuits, installation regulations, commissioning, maintenance etc.)

Rotary valve A - AB = 100%

A - AB = 0%

Modulating operation

**≯**γ2



